

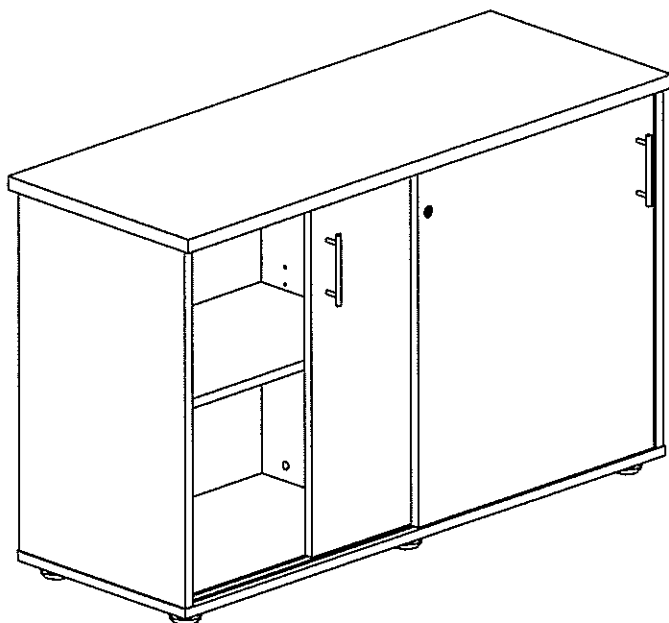
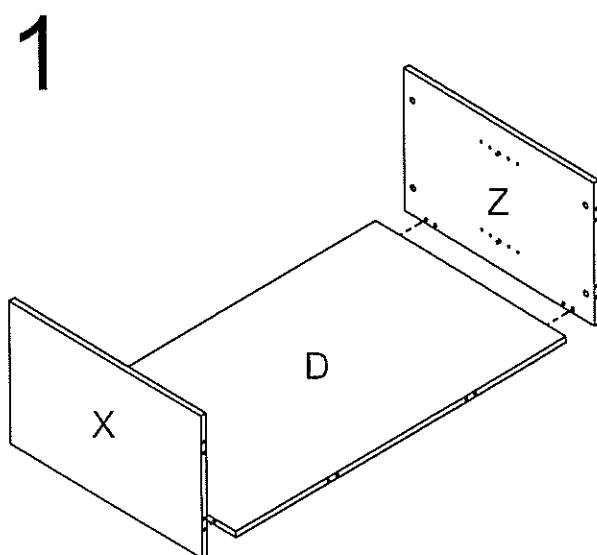
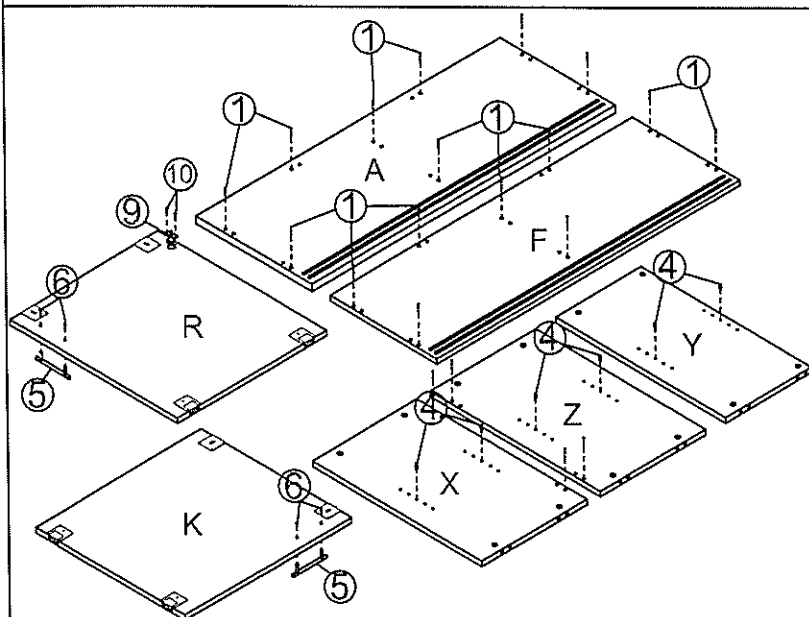
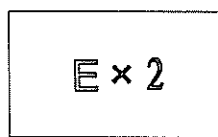
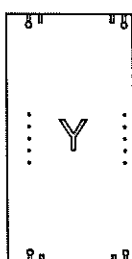
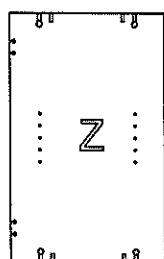
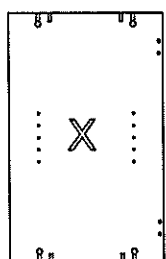
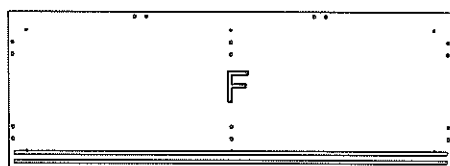
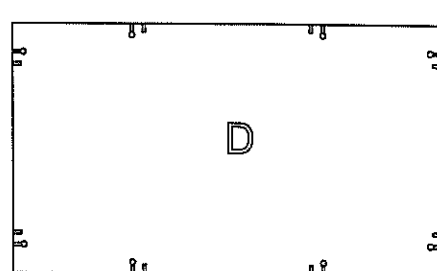
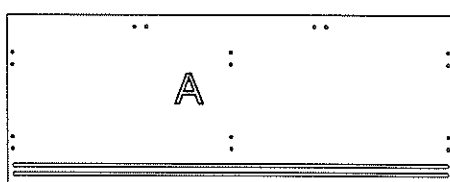



# ASSEMBLY INSTRUCTIONS

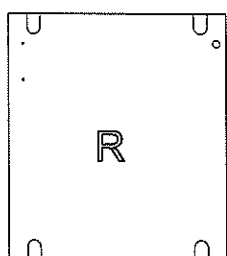


pin 6x35 1 20PCS	CAM 2 20PCS
Door Cover 3 20PCS	Not Mink 18-t/A-8 4 8PCS
T-Handle 5 2PCS	Screw 4x22 6 4PCS
QUINHOA 28-t/A-25 7 8PCS	Screw 4x30 8 8PCS
LOCK 9 1PCS	Screw 5.5x18 10 2PCS

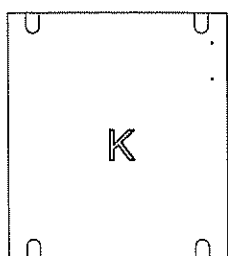


2

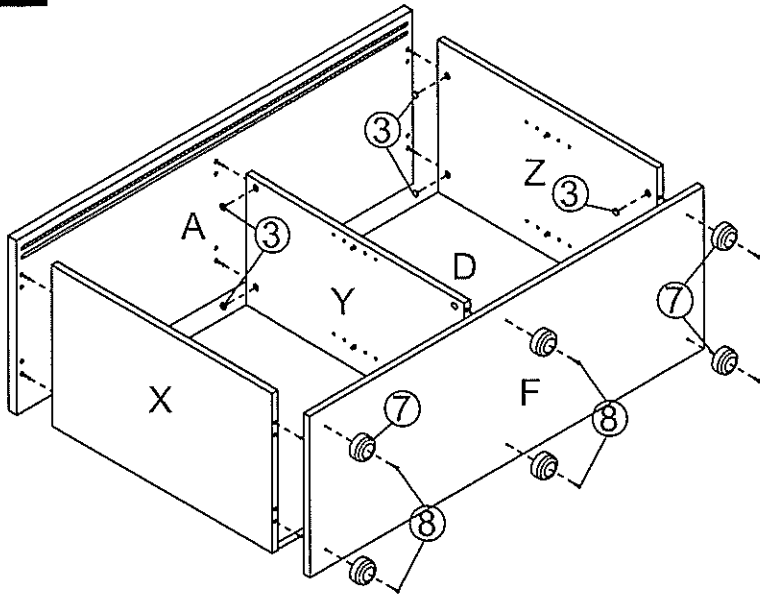


3

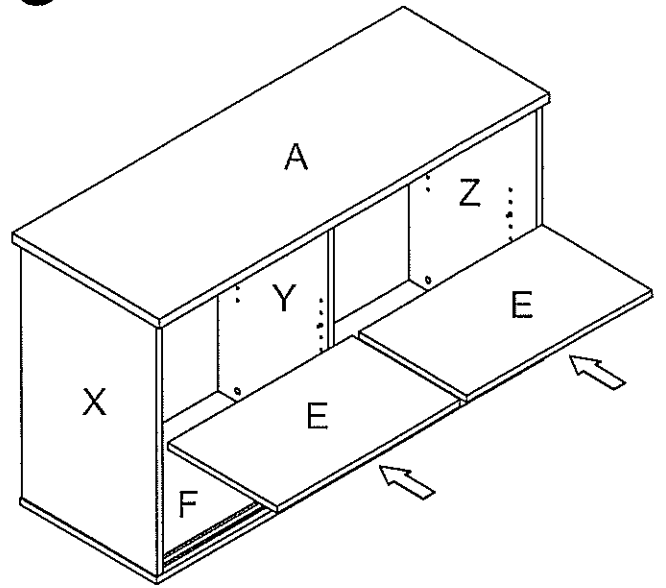

4

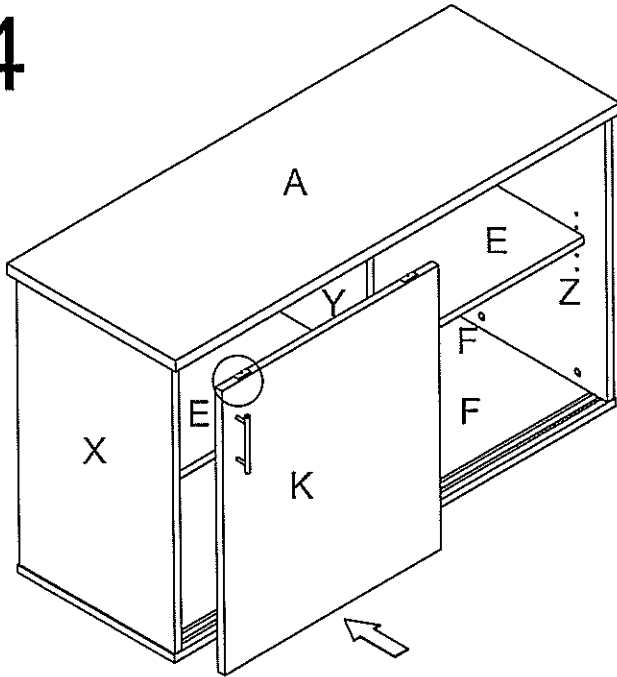

5

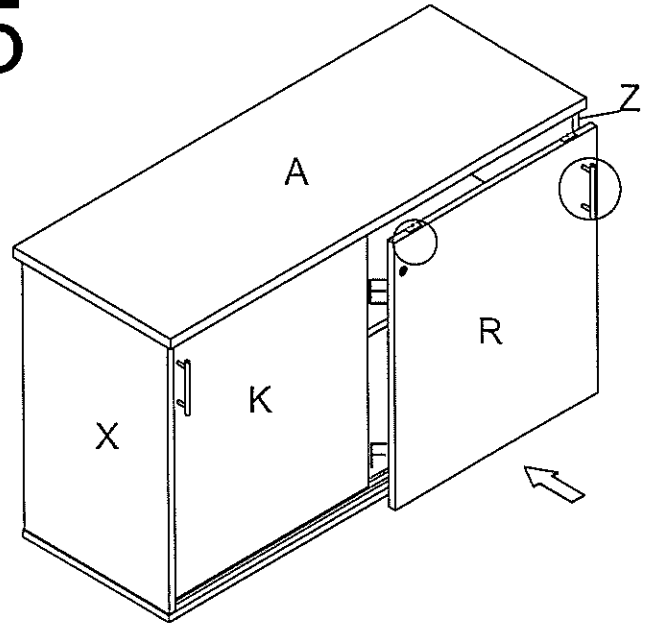

6

