

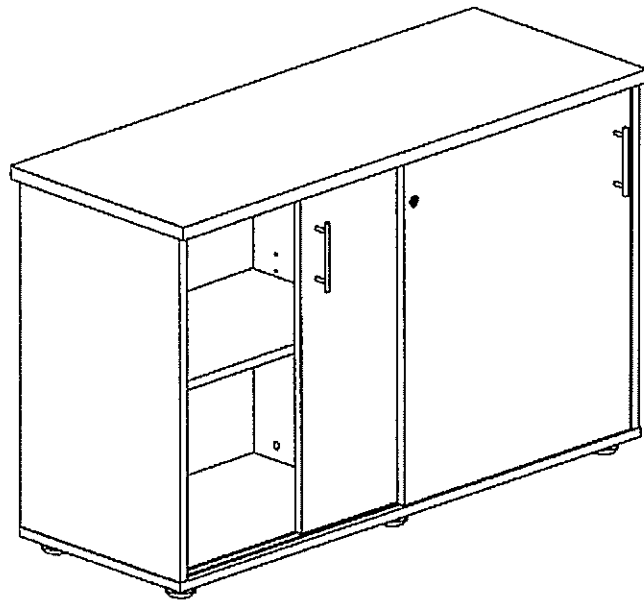
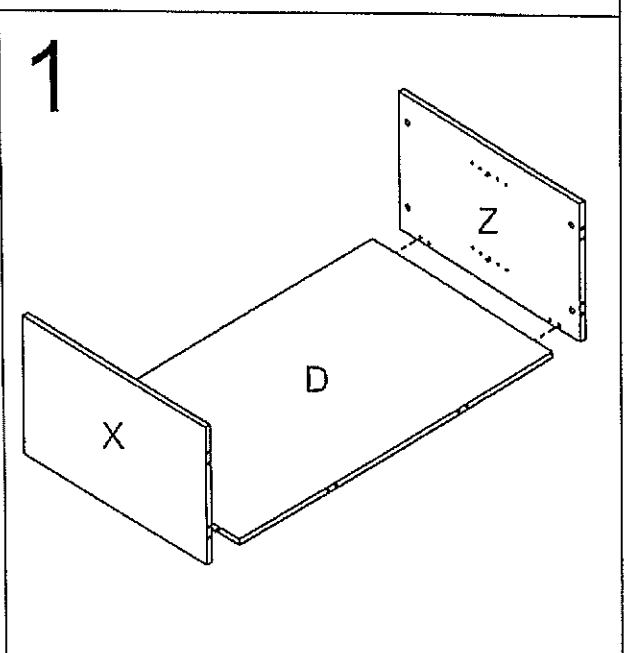



ASSEMBLY INSTRUCTIONS

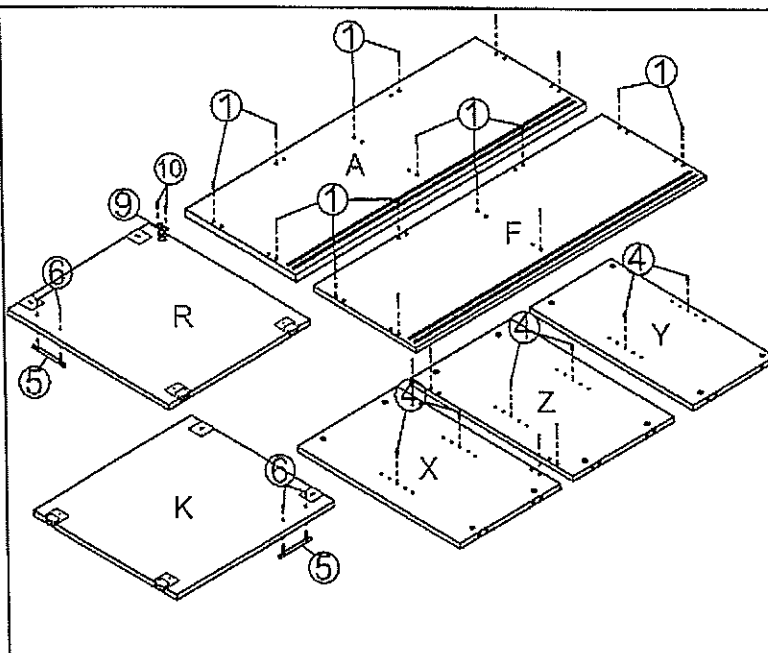


<p>1 20PCS</p>	<p>2 20PCS</p>
<p>3 20PCS</p>	<p>4 8PCS</p>
<p>5 2PCS</p>	<p>6 4PCS</p>
<p>7 8PCS</p>	<p>8 8PCS</p>
<p>9 1PCS</p>	<p>10 2PCS</p>

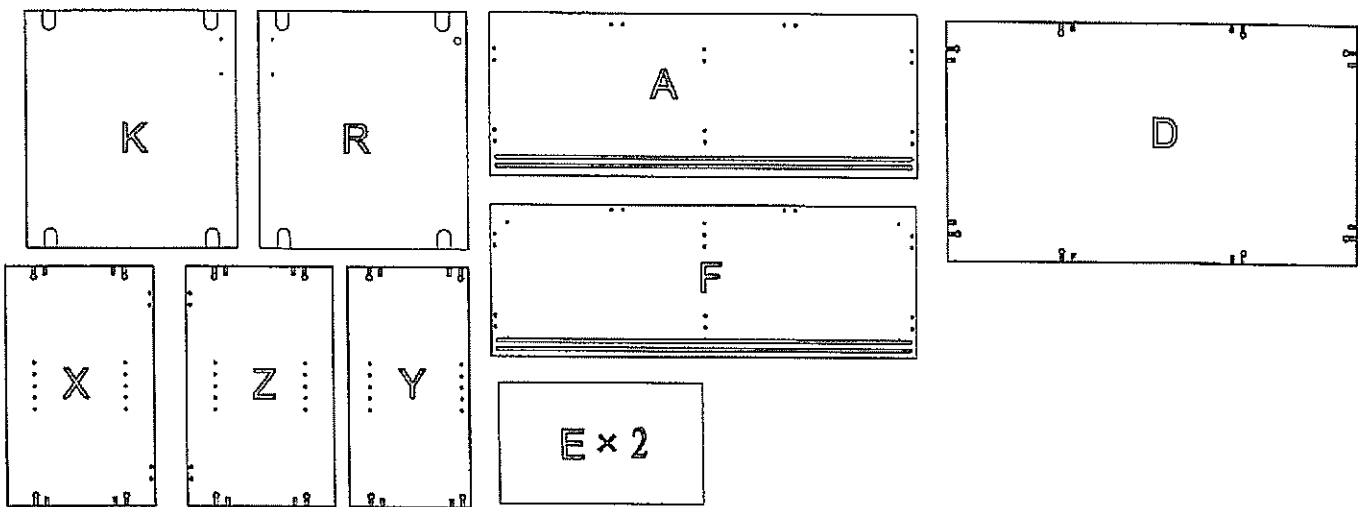


2

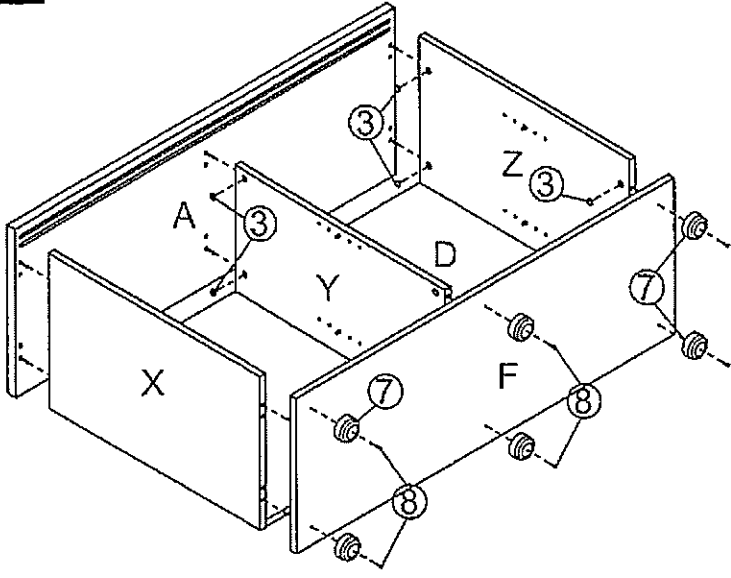


3

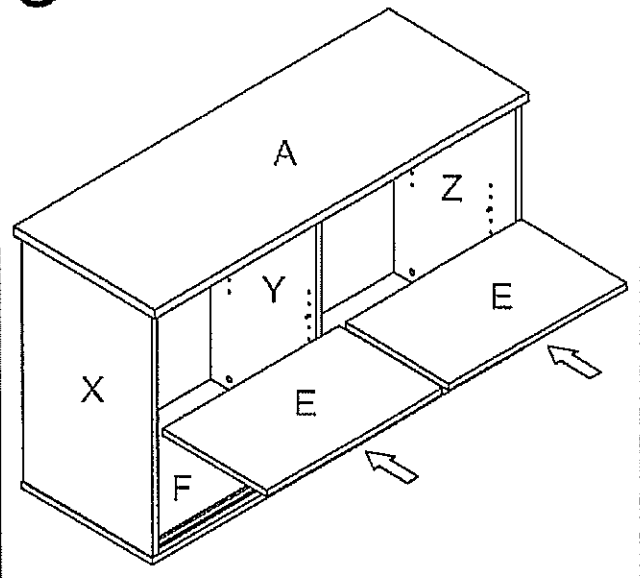



4

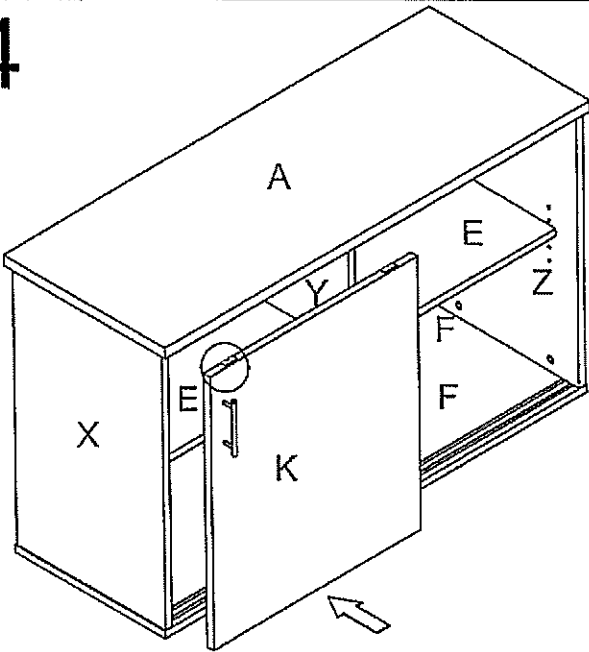


5

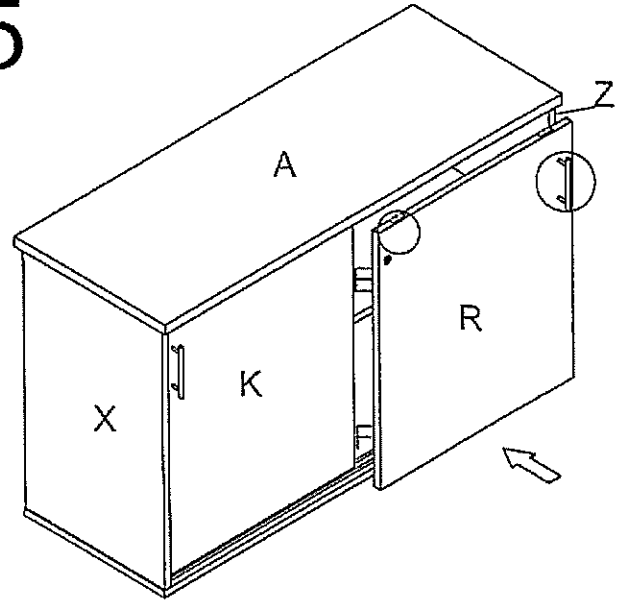


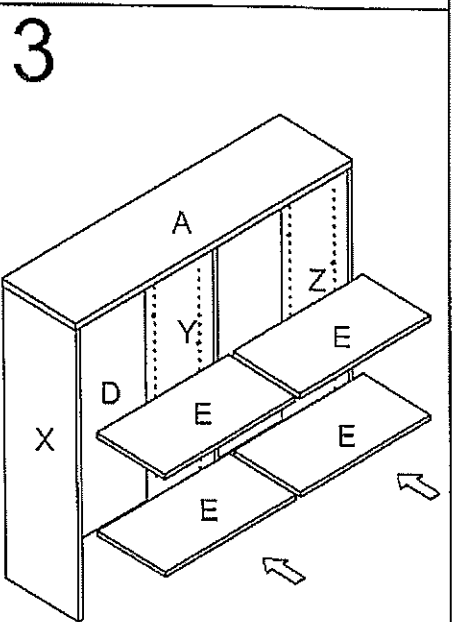
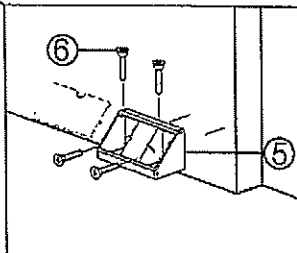
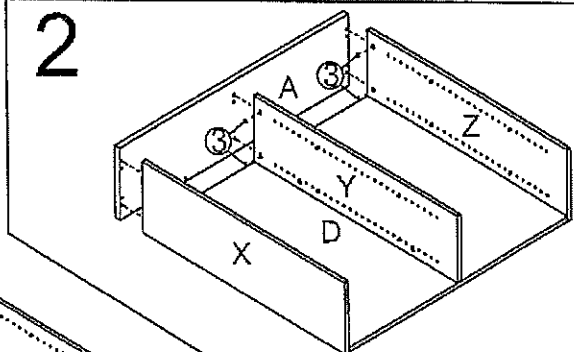
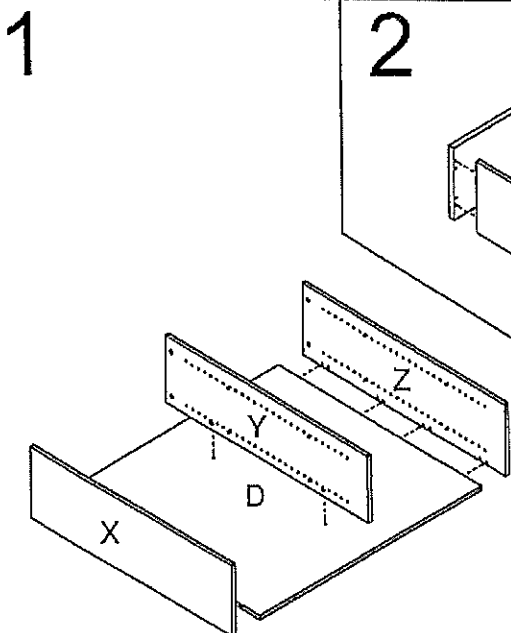
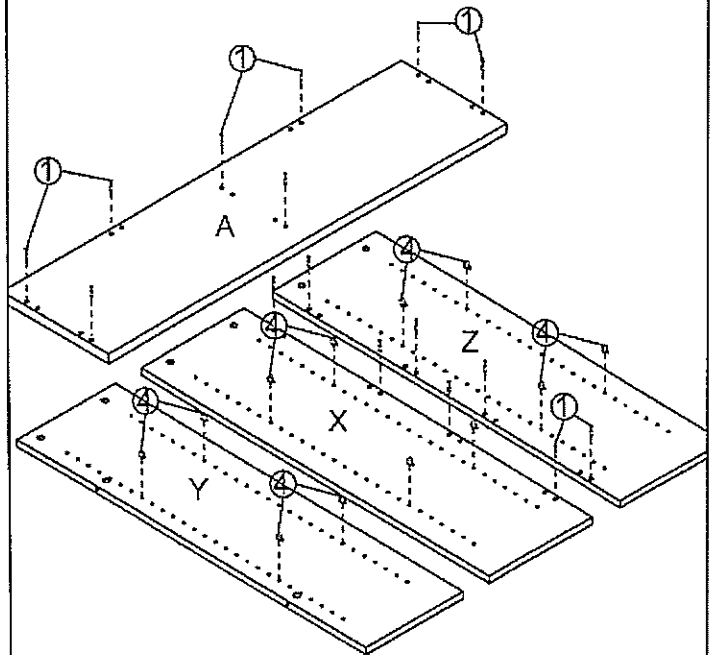
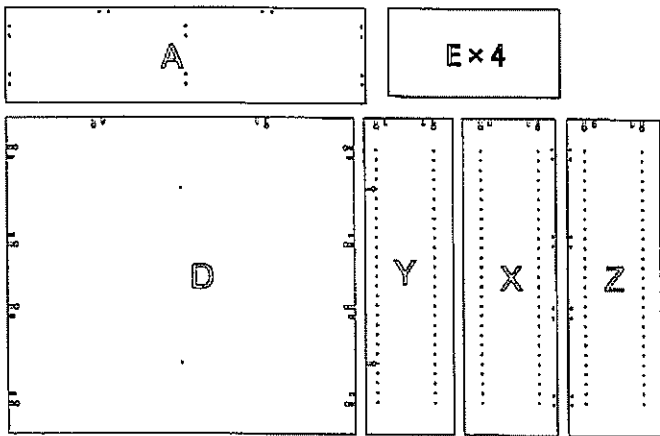
6

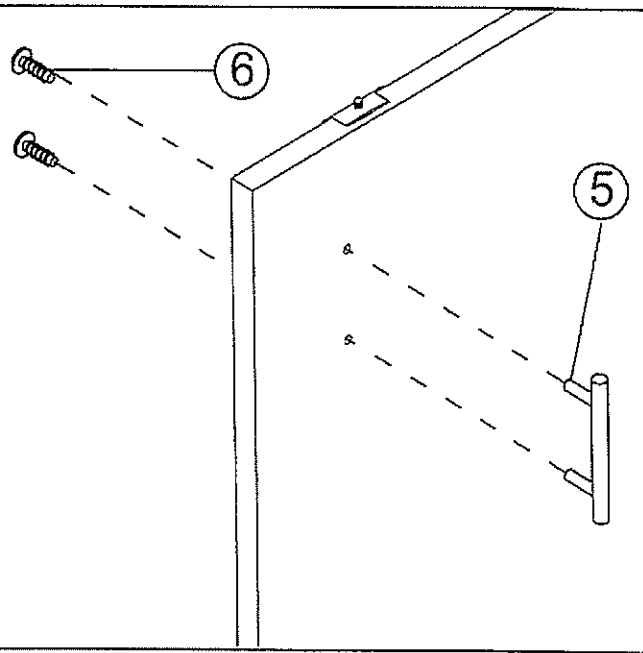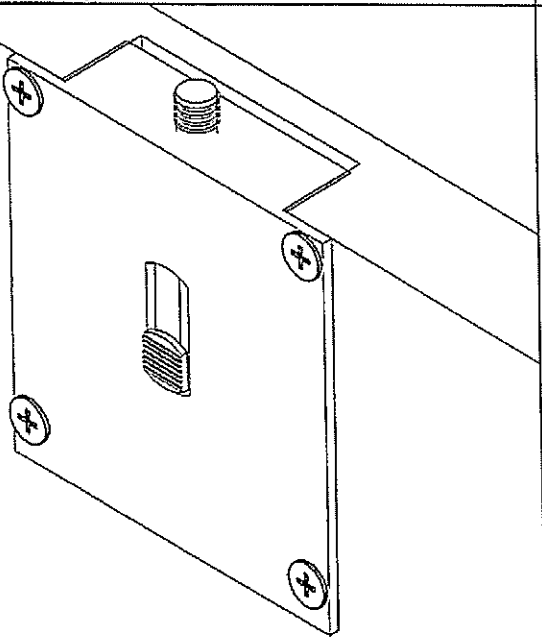


ASSEMBLY INSTRUCTIONS

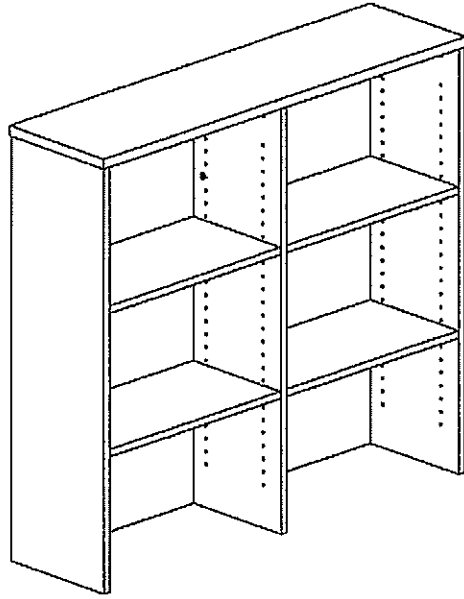

pin	8x38
1	18PCS
Cam	
2	18PCS
Cam Cover	
3	18PCS
Box Mount	
4	18PCS
Bracket	
5	4PCS
Barw	4x A15
6	18PCS

ASSEMBLY INSTRUCTIONS

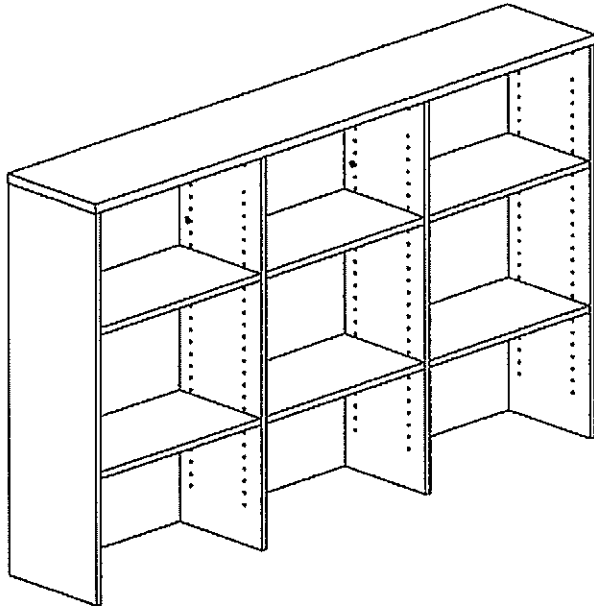

Pin	8x35
1	24PCS
CAM	
2	24PCS
Door Cover	
3	24PCS
Bot. Hinge	
4	24PCS
Bracket	
5	4PCS
Screw	4x18
6	18PCS

